


ATTENTION: Designed for seaside beaches, Not for backyards, grass, lakes, etc.

① Insert the cross support bars into the canopy.



② Assemble 2 sections of vertical support bar and insert the vertical support bar pins into the center holes of the horizontal support bar.

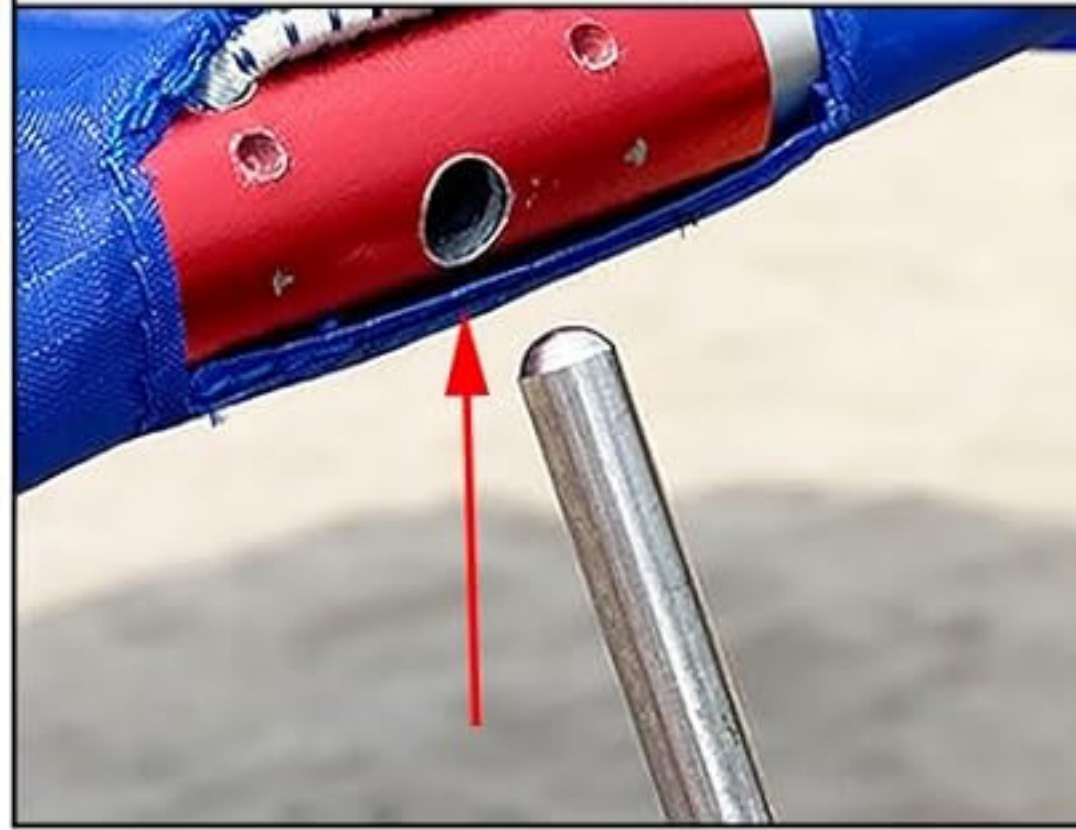

③ Assemble 3 sections of vertical support poles and dig a hole about 9 in deep in the sand.



④ Insert the pin into the support bar and push the bar deeper with your foot on the pin.



⑤ Adjust the vertical support poles to be oriented perpendicular to the beach, then backfill the pit with sand using your feet and stomp firmly to make it firm.



⑥ Combine the assembled support bar with the support bar inserted into the sand pit



Make sure your spot offers stable wind from 1 direction and always set of the shade with your back into the wind while holding the shade “downwind”

⑧

Finish by adding a counterweight, attach the rope to a cooler or sandbag. Enjoy the beach!

